

fig.1

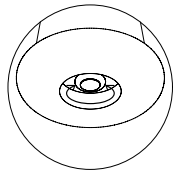

fig.2

Instruction for use

1. To refill the PM13D with spices, hold the wooden body on a board, working and pulling the metal head towards the top (fig.1).
2. Fill the body with spices and reposition the head by pressing down.
3. To adjust the grinding thickness, turn the lower knob (fig.2) clockwise for finer and vice versa for thicker.

Notice d'utilisation

1. Pour recharger le PM13D en épices, maintenez le corps en bois sur un plan de travail et tirer la tête en métal vers le haut (fig.1).
2. Remplir le corps avec les épices et re-placer la tête en pressant vers le bas.
3. Pour régler l'épaisseur de la mouture tourner la molette inférieure (fig.2) dans le sens horaire pour plus fin et inversement pour plus épais.

Anodised aluminium and metal Care	• Wipe with a clean, soft, dry cloth or slightly damp cloth. • Always dry with a clean, dry cloth after removing any residue. • Keep the surface clean and dry. It may stain permanently if residue is not removed quickly. • Do not use abrasive, chemical or solvent-based products unless specified, as they may damage the surface. • Always dry with a clean, dry cloth after cleaning to remove any remaining residue.
Wood Care	• Clean the surface with a soft, damp cloth. • Wipe up spills immediately to prevent staining. • Do not soak the surface and make sure it is completely dry after cleaning before use. • Do not use abrasive pads or sandpaper on the wooden surface. • Never place hot items directly on the surface.

Entretien métal et aluminium anodisé	• Essuyez avec un chiffon doux propre et sec ou légèrement humidifié. • Séchez toujours avec un chiffon propre et sec après avoir enlevé tout résidu. • Gardez la surface propre et sèche. Elle peut se tacher de façon permanente si les résidus ne sont pas retirés rapidement. • N'utilisez pas de produits abrasifs, chimiques ou de solvants, sauf si spécifié, car ils pourraient endommager la surface. • Séchez toujours avec un chiffon propre et sec après le nettoyage pour enlever tout résidu.
Entretien Bois	• Nettoyez la surface avec un chiffon doux et humide. • Essuyez immédiatement les éclaboussures pour éviter les taches. • Veillez à ne pas tremper la surface et assurez-vous qu'elle soit bien sèche après le nettoyage avant de l'utiliser. • N'utilisez pas de tampons abrasifs ou de papier de verre sur la surface en bois. • Ne placez jamais de produits chauds directement dessus.